

# INDIAN

Air Pistol Cal. 4,5 mm.(.177)

|                              |                               |                                |
|------------------------------|-------------------------------|--------------------------------|
| P1 Barrel                    | P16 Main spring guide         | P34 Left hand grip             |
| P2 Locking bolt              | P17 Spindle washer            | P35 Right hand grip            |
| P3 Rear sight                | P18 Tang guide screw          | P36 Hand grip screw            |
| P4 Rear sight screw          | P19 Gear                      | P37 Hand grip nut              |
| P5 Sight bead                | P20 Loading lever pin         | P38 Crosse holder screw        |
| P6 Sight bead screw          | P21 Spring support            | P39 Crosse holder screw washer |
| P7 Sight bead nut            | P22 Fastener                  | P40 Trigger                    |
| P8 Loading lever             | P23 Locking bolt cap          | P41 Hook                       |
| P8M Cocking lever plug       | P24 Locking bolt guide pin    | P42 Sear                       |
| P9 Loading lever base washer | P25 Locking bolt spring       | P43 Trigger pin                |
| P10 Lever retaining ring     | P26 Locking bolt spring guide | P44 Sear pin                   |
| P11 Compression tube         | P27 Plug screw                | P45 Hook pin                   |
| P12 Sight bead pin           | P30 Butt stock                | P46 Hook spring                |
| P13 Piston sleeve            | P31 Safety device             | P47 Hook retaining washer      |
| P14 Piston                   | P32 Safety ball               | P48 Sear holder washer         |
| P15 Main spring              | P33 Safety spring             | P49 Trigger holder washer      |

